

Brookstone®

IDESIGN®

# Wireless Stereo Speakers

ENJOY PREMIUM SOUND  
IN ANY ROOM



# TABLE OF CONTENTS

Warnings and Cautions .....	2-4
FCC Information .....	5
Location of Controls (Transmitter) .....	6
Location of Controls (Speakers) .....	7
Accessories .....	8
Connecting the Transmitter to the Audio Source .....	9
Speaker Connection and Unit Operation .....	10
Specifications .....	11
Care and Maintenance .....	11
Troubleshooting .....	12
Warranty .....	13-14

## CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

## IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

## SAVE THESE INSTRUCTIONS

## **DANGER**

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.
6. For indoor use only. Do not expose the unit to rain or other extreme conditions.

## **WARNING**

1. Keep away from children. This is not a toy.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.

8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by cord or use cord as handle.
11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the socket by pulling the power cord.
15. Do not place on or near a CRT (Cathode Ray Tube). Picture distortion may result.

## **FCC INFORMATION**

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

 
 
 
Modifications not authorized by the manufacturer may void the user's authority to operate this device.

## **SAVE THESE INSTRUCTIONS**

# LOCATION OF CONTROLS

## TRANSMITTER



1. LED Power Indicator
2. RCA Audio Left IN Jack
3. RCA Audio Right IN Jack
4. AC/DC Adapter Input Jack
5. On/Off Switch & Channel Selector
6. Stereo/Mono Selector

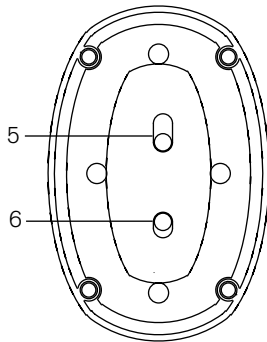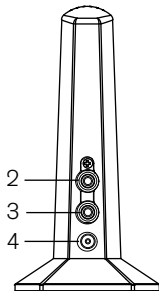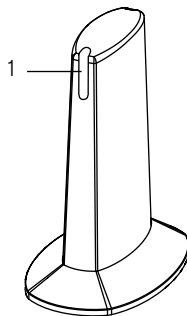

# LOCATION OF CONTROLS

## SPEAKERS

  
1. Speaker Power Switch and Volume Control
2. LED Speaker Power Indicator
3. Channel Selector
4. AC/DC Adapter Input Jack

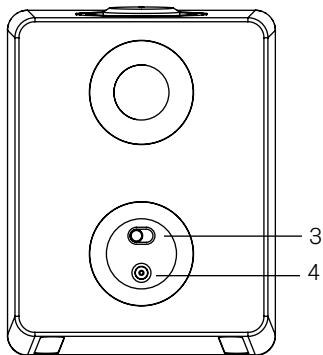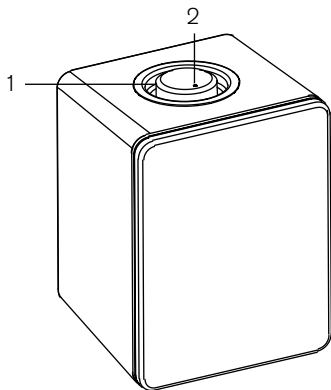


## ACCESSORIES



 
3.5mm to RCA Cable

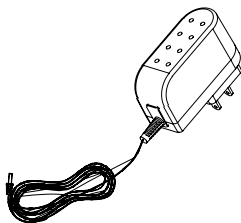

Power Adapter  
for Transmitter

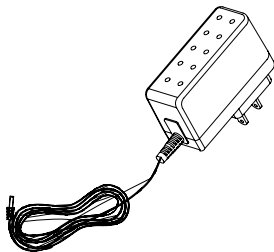 

Power Adapter  
for Speaker (2)

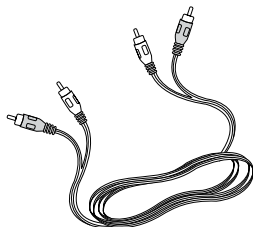 

Dual RCA Cable

## OPERATION

Insert the DC Output plug on the Transmitter POWER ADAPTER into the DC9V input jack on the Transmitter, and put the AC Power plug of the Transmitter POWER ADAPTER into an electrical outlet.

## CONNECTING THE TRANSMITTER TO AN AUDIO SOURCE

The transmitter may be connected two ways depending on your audio source.

If your audio source has left and right RCA audio output jacks, use the DUAL RCA CABLE to connect your audio source to the transmitter.

- Insert one end of the DUAL RCA CABLE into the matching colored Right/Left LINE IN jacks on the transmitter, and the other end into your audio source's matching colored right and left audio output jacks.

If your audio source has only a stereo headphone jack, use both the 3.5mm to RCA CABLE and the DUAL RCA CABLE to connect your audio source to the transmitter.

- Connect the 3.5mm TO RCA CABLE to the DUAL RCA CABLE by inserting the ends of the DUAL RCA CABLE jacks to the matching colored RCA sockets on the 3.5mm TO RCA CABLE.
- Connect the 3.5mm end of the 3.5mm TO RCA CABLE to your audio source's headphone jack, and the other end of the connected DUAL RCA CABLE to the matching colored Right/Left LINE IN jacks on the transmitter.

**Note:** DO NOT connect the DUAL RCA CABLE to speaker terminals on your TV or audio source. This may damage the transmitter, your TV or audio source.

## SPEAKER CONNECTION AND UNIT OPERATION

1. Select channel 1, 2 or 3 on the base of the transmitter and the TRANSMITTER POWER INDICATOR will illuminate.
2. Select STEREO or MONO on the base of the transmitter according to your preference.
3. Insert the DC Output plug from the SPEAKER POWER ADAPTER into the DC12V input jack on the speaker, and the AC Power plug of the SPEAKER POWER ADAPTER into an electrical outlet. Repeat for second speaker.
4. Turn on your audio source and adjust its volume.

**Note:** If the transmitter is connected to your audio source's variable-level output jacks, you may adjust the volume on your audio source. If the transmitter is connected to your audio source's fixed-level output jacks, no volume adjustment on your audio source is needed.

5. Select channel 1, 2 or 3 on each speaker—the same channel selected on the transmitter.

**IMPORTANT:** The Speakers and Transmitter channels all need to match in order for the unit to operate correctly.

6. Turn the SPEAKER VOLUME SWITCH AND VOLUME CONTROL on each of the speakers clockwise until it clicks and the SPEAKER POWER INDICATOR illuminates.
7. Adjust the speaker volume on each speaker to your desired listening level.
8. If signal interference occurs, change the channel (to the same channel) on both speakers and transmitter.
9. When not in use, turn the power off on both speakers by turning the SPEAKER VOLUME SWITCH AND VOLUME CONTROL counter-clockwise until it clicks and slide CHANNEL SELECTOR on the transmitter to the OFF position.

**Note:** For the best transmission and reception, the wireless transmitter must be placed in vertical, upright position.

## **SPECIFICATIONS**

Power On/Off with Volume Control:..... Yes

Fine Tuning:..... Automatic

Speaker Units: ..... 3" Speaker

Frequency Range: ..... 50Hz-20kHz

Dimensions of each Speaker: ..... 5.35" x 5.4" x 6.8"

## **CARE AND MAINTENANCE**

Unplug all components and wipe the transmitter and speakers with a soft, damp cloth.

Do not use alcohol-based or abrasive chemicals of any kind.

# TROUBLESHOOTING

## PROBLEM

## SOLUTION

---

Poor reception.

Make sure transmitter and speakers are on the same channel.

Make sure transmitter is in a vertical, upright position.

Move transmitter to a new location.

Move transmitter and speakers closer together.

---

No power.

Make sure all components are plugged in and connections are secure.

# ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser (“Warranty Period”). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone’s property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone’s property.

**Obtaining Service:** To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the “Brookstone” trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser,

but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

**BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

# Brookstone®

A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire USA 03054 • 800-846-3000 • [www.Brookstone.com](http://www.Brookstone.com)

623389