

Brookstone®

MOSHI

VOICE CONTROL ALARM CLOCK



TABLE OF CONTENTS

Warnings and Cautions	2-6
Location of Controls	7-8
Inserting the Batteries	9
About Moshi's Voice Activation	9
Illumination	10
Talking to Moshi	11
Setting the Time	11
Setting the Alarm	12
Choosing the Alarm Time	13
Setting the Day, Month and Year	12
Asking for the Time	13
Asking for the Alarm Time	14
Turning the Alarm On/Off	14
Snooze	15
Sleep Sound	15
Play Sleep Sound	16
Today's Date	16
Temperature	16
Night Light	17
Help	17
Specifications	18
Frequently Asked Questions	19-20
Warranty	21-22

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Close supervision is necessary when this appliance/product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.

7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by cord or use cord as handle.
11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the socket by pulling the power cord.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device.



BATTERY PRECAUTIONS

- Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

SAVE THESE INSTRUCTIONS

LOCATION OF CONTROLS

1. Clock Screen
2. Base
3. Microphone
4. Plus (+) Button
5. Minus (–) Button
6. Set Button
7. Mode Button
8. Reset
9. Night Light S/M Switch
10. DC 5V Jack
11. IVR/Touch Switch
12. Alarm On/Off Switch
13. Volume H/M/L (High/Medium/Low)
14. 5V Adapter (not shown)

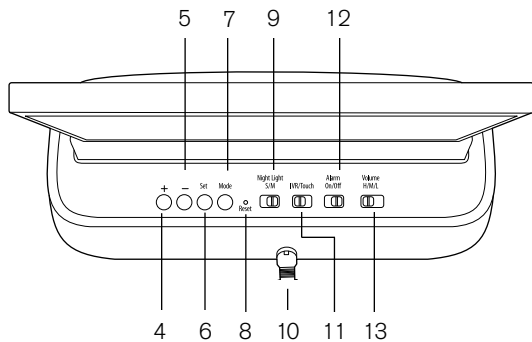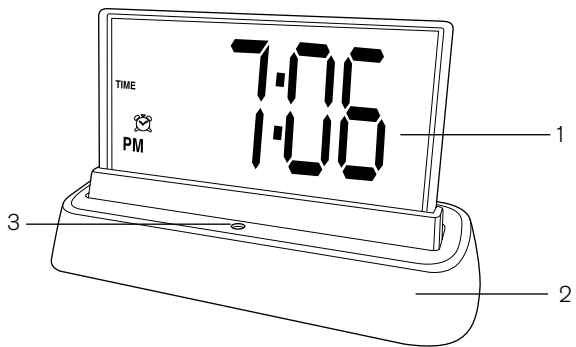

INSERTING THE BATTERIES

1. Remove the battery compartment cover by pushing the latch and lifting the cover off.
2. Insert 3 AAA batteries according to the polarity indicators.
3. Replace the battery compartment cover by inserting the tabs into the slots and snapping the latch securely back into place.

ABOUT MOSHI'S VOICE ACTIVATION

When Moshi is plugged in using the included AC adapter, it will respond "voice trigger mode is enabled." This will allow you to activate all the commands using your voice. Please make sure the switch on the back is set to "IVR" mode.

When using battery power, move the switch to "Touch."

Note: When using the clock on battery power, the voice trigger mode is disabled and the screen must be pressed to initially activate Moshi.

ILLUMINATION

Moshi has alternating, illuminating color backgrounds for speaking and listening when the NIGHT LIGHT S/M switch is in the M (multiple) position:

- When Moshi is talking, the clock screen will illuminate in blue.
- When Moshi is listening, the clock screen will illuminate in green.
- Moshi's screen will display dark blue if the temperature is 59° F or below.
- Moshi's screen will display light blue if the temperature is between 60° and 69° F.
- Moshi's screen will display green if the temperature is between 70° and 89° F.
- Moshi's screen will display red if the temperature is 90° F or above.

Note: Moshi's screen will illuminate the colors for different temperatures only when you are asking Moshi for the temperature, not at all times.

- The night light will alternate in 6 colors.
- When the NIGHT LIGHT S/M switch is in the S (single) position, the illumination will default to blue.

TALKING TO MOSHI

1. To activate Moshi, say "hello Moshi."
2. Moshi will respond "welcome, command please."

Note: If you are running on batteries, not AC power, press the **CLOCK SCREEN** back to activate Moshi's voice command.

SETTING THE TIME

After you activate Moshi:

1. Say "set time."
2. Moshi will respond "tell me the current time."
3. State the time in a clear voice. Example: "ten twenty two PM."
4. Moshi will then repeat the time back to you. Example: "the time is now set to ten twenty two PM."
5. Your time is set!

SETTING THE ALARM

After you activate Moshi:

1. Say "set alarm."
2. Moshi will respond "tell me the time you want the alarm to sound."
3. State the alarm time in a clear voice. Example: "six thirty AM."
4. Moshi will then repeat the alarm time back to you: "the alarm time is now set to six thirty AM."
5. Your alarm time is set!

CHOOSING AN ALARM SOUND

After you activate Moshi:

1. Say "alarm sound."
2. Moshi will respond "to choose an alarm sound, say alarm 1, alarm 2 or alarm 3" giving an example of each alarm sound after each numbered choice.
3. Say your choice. For example: "alarm 2."
4. Moshi will then play a short sample of the alarm sound you chose.
5. Your alarm sound is set!

SETTING THE DAY, MONTH AND YEAR

MANUAL FUNCTION ONLY

1. Press MODE until the date is visible on the CLOCK SCREEN.
2. Press SET, and Moshi will tell you the date for which the clock is currently set.
3. Moshi will stop on the year, which will flash. Press the + or – buttons to reach the current year.
4. Press SET button to save your choice and Moshi will go to the month, which will flash.
5. Press + or – buttons to reach the current month.
6. Press SET to save, and Moshi will go to the day, which will flash.
7. Press the + or – buttons to reach the current day.
8. Press SET to save.

Note: You may also manually set the time and alarm by following the steps above.

ASKING FOR THE TIME

After you activate Moshi:

1. Say "time."
2. Moshi will respond by telling you the correct time.

ASKING FOR THE ALARM TIME

After you activate Moshi:

1. Say "alarm."
2. Moshi will respond by telling you the current set alarm time and status.

TURNING THE ALARM ON/OFF

1. Say "set alarm" to turn the alarm on.
2. The alarm will sound at the set time, gradually increasing in volume for one minute, after which it will automatically snooze and ring again in 9 minutes.
3. Moshi will snooze 3 times and then automatically reset for the following day.
4. To turn off the alarm, when the alarm is sounding, say "turn off the alarm" between alarm sound to shut off the alarm for the day.
5. Moshi will respond by telling you the time, date and current inside temperature.
6. To manually turn the alarm off, move the ALARM ON/OFF switch to off and the alarm will not ring.

Note: When you turn off the alarm when it is sounding, Moshi will tell you the time, date and inside temperature. When the alarm is not sounding, Moshi will not speak.

SNOOZE

When the alarm is ringing, press the **CLOCK SCREEN** back and Moshi will snooze and ring again in 9 minutes.

Note: Moshi will snooze three times, then automatically reset to ring at the same time the following day. To cancel the snooze mode (when the alarm is not sounding) press the **CLOCK SCREEN** back and Moshi will reset for the same time the following day.

SLEEP SOUND

After you activate Moshi:

1. Say "sleep sound."
2. Moshi will respond "to choose a sleep sound, say sound 1, sound 2 or sound 3", giving an example of each sleep sound after each numbered choice.
3. Say your choice. For example: "sound 2."
4. Moshi will then play a short sample of the sleep sound you chose.
5. Your sleep sound is set!

PLAY SLEEP SOUND

After you activate Moshi:

1. Say "play sleep sound."
2. Moshi will play your previously selected sleep sound for 5 minutes.
3. To de-activate the sleep sound, press the CLOCK SCREEN back.

TODAY'S DATE

After you activate Moshi:

1. Say "today's date."
2. Moshi will respond by telling you today's date.

TEMPERATURE

After you activate Moshi:

1. Say "temperature."
2. Moshi will respond with the current inside temperature.

To change the temperature reading between Fahrenheit and Celsius:

1. Press the MODE button until the temperature is on the CLOCK SCREEN.
2. Press the SET button to toggle between Fahrenheit and Celsius.
3. Simply stop on your choice, and Moshi will remember your preference.

NIGHT LIGHT

After you activate Moshi:

1. Say "night light."
2. Moshi will light up, alternating between 6 colors when the NIGHT LIGHT S/M switch is in the M position, or steady blue if the NIGHT LIGHT S/M switch is in the S position, for a nice, night light glow.

HELP

After you activate Moshi:

1. Say "help."
2. Moshi will respond by reciting the voice commands you can activate.

SPECIFICATIONS

Battery Power.....	3 AAA batteries (not included)
AC/DC Power	DC 5V AC/DC Adapter (included)
Size	3" w x 7.5" l x 5" h
Weight.....	11.4 oz

FREQUENTLY ASKED QUESTIONS

- 1. My Moshi Alarm Clock does not hear my commands.**
It is important to remember that you cannot give a command while Moshi is speaking.
- 2. How do I know if the Moshi Alarm Clock is showing AM or PM time?**
When clock is telling AM time there will be no icon on the display, but when in PM time, the icon "PM" will appear in upper left corner. In addition, when setting time, if you do not specify AM or PM, it will automatically set to AM time.
- 3. My Moshi Alarm Clock confuses numbers when setting the time or alarm.**
This is common in the English language. For example, it is common to confuse 9 and 5. Try again, speak loud and clear.
- 4. I cannot set the date by voice.**
Set the date on the bottom side of the clock (refer to page 12).
- 5. I cannot activate the alarm.**
Verbally, say "set alarm" to turn the alarm on. To turn off or cancel the alarm, say "turn off the alarm". Manually, you can turn the alarm on by the switch located on the bottom side of the clock. The alarm icon on the display verifies that the alarm is activated.
- 6. Can I make the alarm sound louder?**
No, but the alarm volume does increase during the minute it is played.

7. How do I interrupt my Moshi Alarm Clock?

Touch display to stop Moshi from speaking. During the help menu you can touch the display to stop it from speaking and then give a command.

8. How do I turn off the sleep sound?

Touch the display.

9. How do I snooze the alarm?

Touching the screen gives you a snooze time of 9 minutes. Or the alarm will automatically snooze for 9 minutes if alarm is not turned off after a minute. The only way to turn OFF the alarm is by giving the command, "Turn off the Alarm."

10. Can I change temperature to Celsius?

When setting the date, you can choose Fahrenheit or Celsius (refer to page 15).

11. How do I reset Moshi?

Remove batteries or use the reset button located on the bottom side.

12. Can Moshi listen to a command when the sleep sound is playing?

No, Moshi cannot listen to a command when the sleep sound is playing.

The sleep sound will turn off automatically after five minutes or by pressing the display.

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser (“Warranty Period”). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone’s property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone’s property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the “Brookstone” trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser,

but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Brookstone®

A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire USA 03054 • 800-846-3000 • www.Brookstone.com

622373