

B
B
B
B

BETTER BY BROOKSTONE® WE CREATE PRODUCTS TO MAKE LIFE BETTER. THROUGH INNOVATIVE DESIGN, BEST-IN-CLASS PRODUCT SELECTION AND AN UNYIELDING COMMITMENT TO EXCELLENCE, WE MAXIMIZE THE QUALITY OF OUR PRODUCTS—AND HELP YOU ENHANCE THE QUALITY OF YOUR LIFE.

Brookstone®

ultrasonic jewelry cleaner



Merrimack, New Hampshire 03054 • Customer Service 800-846-3000 • www.Brookstone.com

572545

572545_INS_UltrasonicJewelryCleaner_Size:5"Wx4.75"H_Output:100%_Prints:1/0Blk



BB
BB

This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; or g) any and all pre-existing conditions that occur prior to the effective date of this Limited Warranty relating to any product sold "as is" including, without limitation, floor demonstration models and refurbished items.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

ONE (1) YEAR LIMITED WARRANTY

Brookstone warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at **1-800-292-9819**. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and U.S. Virgin Islands.

This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is."

ultrasonic jewelry cleaner

BETTER BY BROOKSTONE®

We believe that exacting standards are the core of our success. The Ultrasonic Jewelry Cleaner has been thoroughly tested to be certain it meets our rigorous quality control criteria.

Our Ultrasonic Jewelry Cleaner uses sound waves and regular tap water to remove dirt, so jewelry, watches and eyeglasses look like new. Simply place your item in the cleaning basket and select the desired clean time. Then watch through the window as it becomes sparkling clean.

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. THERE ARE NO USER-SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO WATER OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.



DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Always unplug the unit from the electrical outlet immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store unit where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for unit that has fallen into water. Unplug it immediately.
6. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

- Use water ONLY in the Ultrasonic Cleaner. Chemicals or other cleaning agents may damage the unit.
- Do not disassemble the unit.
- Unplug the unit immediately after use.
- Keep the unit away from heated surfaces. Place on a dry, flat surface.
- Keep the unit in a safe place ensuring it does not fall into water or other liquid.
- Do not use while bathing.
- Do not reach for the unit if it has fallen into water. Unplug it immediately.
- Do not leave unit unattended when plugged in.
- Do not fill the unit with abrasive or corrosive cleaning agents.
- Unplug the unit before filling it. Do not exceed the MAX FILL LINE.
- Do not immerse the unit in water or other liquid.
- Do not touch an electrical outlet with wet hands.

6. Press  incrementally until your desired clean time appears on the DISPLAY: 090, 180, 280, 380 or 480 seconds.
Note: The amount of time you select should depend on the quantity and cleanliness of the pieces.
7. Press . The unit turns on the time counts down on the DISPLAY.
Note: Press power icon to interrupt the cleaning cycle. Press power icon to resume cleaning.

CARE AND MAINTENANCE

Wipe with a soft, damp cloth, then dry.

JEWELRY CLEANER OPERATION

USING THE JEWELRY CLEANER

1. Press OPEN. The cover opens automatically.
2. Fill the unit with tap water ONLY up to MAX.
3. Insert the power cord into an electrical outlet. The timer illuminates on the DISPLAY.
4. Place your jewelry in the BASKET and place the BASKET in the unit.
Note: Lay your watch over the WATCH HANGER (see Fig. 1).
5. Close the lid.

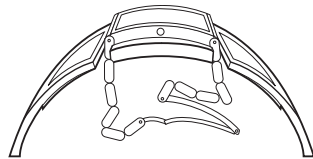


Fig. 1

- Do not use attachments not recommended by the manufacturer.
- Use the unit as indicated in this instruction manual.
- Do not use the unit when sleeping or drowsing.
- Do not operate if cord or plug is damaged.
- If any part of an item is loosely attached, it may loosen more during the cleaning process.
- Do not put easily discolored items, such as cloth products, leather products and woodware, into the unit for cleaning.
- Do not put cell phones or watches that are not waterproof into unit for cleaning.
- Do not use this product to clean fragile or soft stones, such as pearls, emeralds, opals, amber, etc.

LOCATION OF CONTROLS

1. MAX
2. OPEN
3. ⏻ (POWER)
4. DISPLAY
5. ⌚ (TIMER)
6. BASKET
7. WATCH HANGER

