

# Projection Clock



**Brookstone**

BETTER BY BROOKSTONE®

We believe that exacting standards are the core of our success. This product has been thoroughly tested to be certain it meets our rigorous quality control criteria.




Go ahead. Stay in bed. With our projection clock, you can see the time without even lifting your head. Easily project the time, date, day of the week and indoor temperature on your wall or ceiling with the touch of a button.

## BATTERY PRECAUTIONS

- Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

## LOCATION OF CONTROLS

1. TIME/ALARM/CALENDAR/TEMP LCD DISPLAY
2. ALARM STOP/LIGHT/SNOOZE BUTTON
3. HR (HOUR)/MONTH BUTTON
4. MIN (MINUTE)/DATE BUTTON
5. 12HR/24HR/YEAR BUTTON
6. °C/°F BUTTON
7. PROJECTOR
8. PROJECTOR FOCUS
9. SNOOZE/ALARM ON/ALARM OFF SWITCH
10. CALENDAR/TIME SET/ALARM SET/LOCK
11. EXTERNAL ADAPTER
12. ALWAYS BRIGHT ON/OFF SWITCH

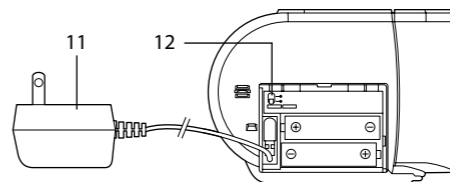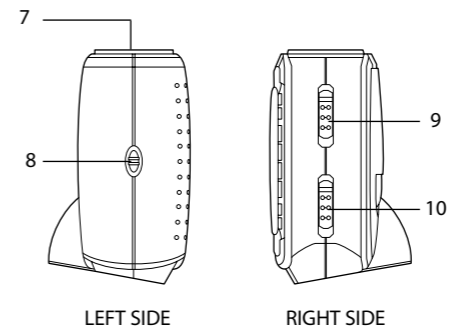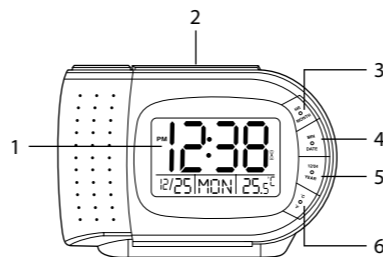

## BATTERY INSTALLATION

Slide and open the battery compartment on the rear of the unit. Insert 3 AA batteries—noting the polarity indicators.

**IMPORTANT: Batteries must be installed to operate clock.**


## TO SET CALENDAR

Slide switch to CALENDAR. Press MONTH, DATE or YEAR buttons and set to the current date.

## TO SET TIME

Slide switch to TIME SET. Press HR or MIN button to set current time.

## TO SET ALARM

- Slide switch to ALM SET position, the AL icon will appear on the display. Press HR or MIN buttons to set alarm time.
- Slide switch to ALARM ON position.  will appear on the time display. The alarm function is activated.
- Slide switch to SNOOZE position to activate the Snooze Alarm.

## LOCK FUNCTION

After you set time and alarm time, slide to the LOCK position to protect against inadvertent changes caused by accidental touching of the buttons.

## USING THE SNOOZE ALARM

Slide to the SNOOZE position, the sign **Zz** will appear on the display. The SNOOZE function is activated. Once the alarm starts to ring, you can activate the snooze by pressing the SNOOZE/LIGHT button. The alarm will stop for 5 minutes, and resume ringing after 5 minutes.

To completely stop the alarm, slide the ALARM SWITCH to the OFF position. Alarm duration—1 minute.



### 12HR/24HR INTERNATIONAL TIME DISPLAY

- Press the 12HR/24HR button to choose your desired format.
- In the 12HR format, a PM icon will appear, indicating PM hours.

### TO SELECT °C/°F TEMPERATURE

Press °C/°F button to choose your desired temperature reading.

### USING THE BACKLIGHT

Press the SNOOZE/LIGHT button once to light up the display with a soft glow.

NOTE: Frequent use of this feature will affect battery life.

### USING THE PROJECTOR

To project the time onto a wall or ceiling, press the SNOOZE/LIGHT button. Adjust the position of the time by moving the projector forwards or backwards.

To focus the image, rotate the PROJECTOR FOCUS switch at the right side of the clock.

### “ALWAYS ON” FUNCTION

When the clock is plugged into a wall outlet, it is possible to have the clock's projector and backlight on continuously.

- Open the battery compartment cover.

- Connect the adapter to the jack below the ALWAYS BRIGHT ON/OFF switch. Plug the other end of the adapter into a wall outlet.
- Slide the ALWAYS BRIGHT ON/OFF switch to the ON position.
- Place the adapter cord through the side opening.
- Replace the battery compartment cover.

**Important: Batteries must still be used to operate clock.**

### CARE OF YOUR CLOCK

- Avoid exposing your clock to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.

### TROUBLESHOOTING

Q. The Backlight or Projection Light does not stay on.

A. Assure plug is fully inserted into the clock, and the Adapter is plugged into a wall outlet.

Q. Numbers do not display.

A. Batteries must be installed to operate clock. Assure batteries are inserted correctly. Or, batteries may be spent and need to be replaced.

Q. Projector does not focus.

A. Turn the Projector Focus knob in the opposite direction.

### ONE (1) YEAR LIMITED WARRANTY

Brookstone warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

**Obtaining Service:** To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands.

This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is."

This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; or g) any and all pre-existing conditions that occur prior to the effective date of this Limited Warranty relating to any product sold "as is" including, without limitation, floor demonstration models and refurbished items.

**BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

