



**Brookstone®**

---

4-in-1 Wine Set  
CUT. OPEN. AERATE. PRESERVE.

## TABLE OF CONTENTS

Warnings and Cautions .....	1
Ni-MH Battery Warning .....	4
Location of Parts and Controls .....	5
Charging the Batteries .....	6
Using the Foil Cutter .....	6
Using the Wine Opener .....	7
Using the Aerator .....	7
Using the Wine Preserver .....	8
Care and Maintenance .....	10
Specifications .....	10
Warranty .....	12

## CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

## IMPORTANT SAFEGUARDS

When using your appliance, basic safety precautions should always be followed, including the following.

1. Read all instructions prior to using.
2. For domestic household use only.
3. Do not use outdoors or charge outdoors.
4. For indoor use only. Do not expose this product or charging unit to rain or other extreme conditions.

5. This product contains sharp parts. Not for use by children.
6. Do not allow this product to be used as a toy. Close attention is necessary when used near children.
7. Do not use this product for other than the intended use.
8. Do not use with damaged cord or plug. Do not use this product if it has been dropped, damaged, left outdoors, or dropped in water. Return it to the service center for examination, repair or adjustment.
9. Never force this product onto a bottle or attempt to speed up the mechanism. The opener will work best when it is operated at its intended speed.
10. Do not attempt to open this product's outer cover. There are no serviceable parts inside.
11. Charge the product only by using the recharging base and supplied adapter.
12. Do not attempt to open bottles if the Wine Opener Button or any other mechanized part is not working correctly.
13. Do not touch or adjust the product's mechanism or the corkscrew spiral. Hold the product by its housing only.
14. To protect against risk of electrical shock, do not put this product in water or other liquids. This may cause personal injury and/or damage to the product.
15. Use of attachments not recommended or sold with this product may cause fire, electrical shock, injury, or damage to the product.
16. Never remove the plug from the socket by pulling the power cord.
17. To protect against fire, do not operate the unit in the presence of explosive and/

or flammable fumes.

18. Do not abuse the charger cord. Never carry the adapter or charging base by the cord or yank to disconnect from an outlet; instead, pull the plug out from the charging base to disconnect, then remove adapter from the electrical outlet.
19. Keep charger cord away from heated surfaces.
20. Do not handle plug or appliance with wet hands.
21. Do not use abrasive materials to clean this product. Do not immerse the unit in water or any other liquids.
22. Read and follow all operational instructions.
23. Do not use charger with an extension cord. Plug charger directly into an electrical outlet. Use charger only in a standard (110-120V, 60 Hz) electrical outlet.
24. This appliance contains rechargeable batteries. Do not dispose of the product in a fire as this may cause an explosion.

**CAUTION: The corkscrew spiral is sharp. Handle carefully. Keep hands and utensils out of the unit while operating to prevent the possibility of severe personal injury and/or damage to the product or property.**

**SAVE THESE INSTRUCTIONS  
HOUSEHOLD USE ONLY**

## SAFETY WARNING

For your safety the warnings below must be followed:

1. Do not place the appliance near a heat source.
2. Use the appliance on a stable surface.
3. Do not unplug the adapter by pulling on the supply cord.
4. The AC Adapter must be unplugged:
  - Before any cleaning or maintenance
  - If the appliance appears to be faulty


## Ni-MH BATTERY WARNING

This device contains four Nickel-Metal Hydride (Ni-MH) batteries. The batteries must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.


Use only the supplied cable to recharge the batteries. Improper charging may damage the batteries and the device.

Do not attempt to open the rechargeable batteries or battery pack. There are no serviceable parts inside.

Keep the batteries out of reach of children. If swallowed, consult a physician immediately.

Do not dispose of batteries in a fire as it may explode. The batteries may also explode if damaged. 

## LOCATION OF PARTS AND CONTROLS

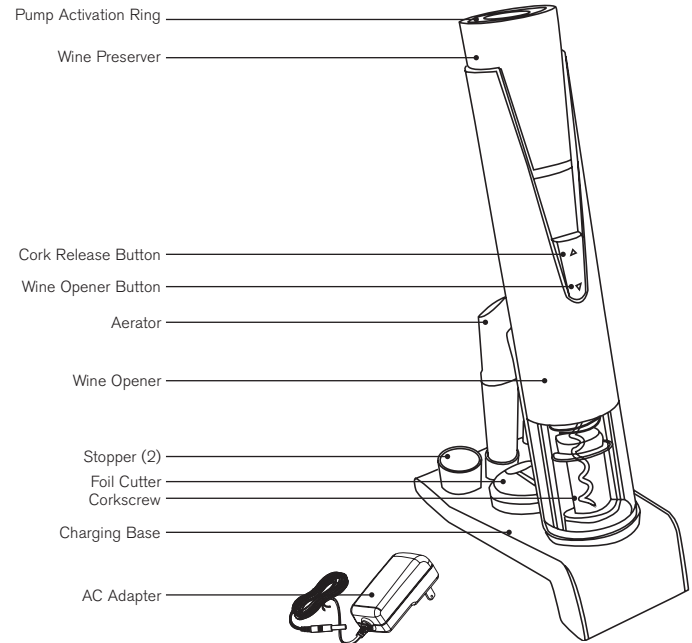

## CHARGING THE BATTERIES

The 4-in-1 Wine Set includes four Ni-MH batteries. Fully charge the batteries before first use. Charging time is approximately 15 hours.

To charge the batteries:

1. Plug one end of the AC Adapter cord into the charging base and the other end into an electrical power outlet.
2. Place the Wine Opener into the charging base. Ensure that the Wine Opener stands firmly in the base and is fully engaged into the charging connector. When the unit is seated properly and the base is connected to an electrical outlet, the LED Indicator will be red. NOTE: The Wine Opener will only fit into the charging base one way.
3. It will take approximately 15 hours to fully charge the Wine Opener. When fully charged, the LED Indicator will turn off. The Wine Opener can be used to open or preserve approximately 25 to 30 wine bottles with one full charge.

To maintain a full charge, leave the adapter connected and the Wine Opener on the charging base.

## USING THE FOIL CUTTER

Before removing the cork from a wine bottle, you must remove the foil wrapper from the top of the bottle.

To remove the foil wrapper:

1. Place the Foil Cutter over the top of the wine bottle.

2. Keeping one hand on the lower part of the bottle, squeeze the Foil Cutter until the blades contact the foil, and turn the Foil Cutter in a twisting motion, cutting the foil.
3. Remove the foil to expose the cork surface.

## USING THE WINE OPENER

1. Place the Wine Opener (the end with the corkscrew) on top of the wine bottle, making sure that the Wine Opener remains as upright as possible at all times. If you hold the opener at an angle, it will not remove the cork properly.
2. Hold the Wine Opener firmly and press the Wine Opener button. The corkscrew will turn, enter the cork, and gradually remove the cork from the bottle. When the corkscrew stops, the cork has been fully removed from the bottle.
3. Lift the Wine Opener up and off the bottle.
4. To remove the cork from the corkscrew, press the Cork Release button. The corkscrew will lower and release the cork.
5. Return the Wine Opener to the charging base. This will protect the mechanism while it is not in use.

## USING THE AERATOR

To aerate your wine, place the wine aerator into the wine bottle and pour the wine. You will see bubbles as air is incorporated into the wine as it is being poured.

Rinse the aerator and return to the charging base.

## USING THE WINE PRESERVER

1. Place the wine bottle on a flat, stable surface.
2. Insert one of the included Stoppers into the neck of the opened wine bottle. The stoppers must always be used in conjunction with the wine preserver.

3. Position the Wine Preserver (the opposite end from the corkscrew) on top of the Stopper, making sure that it remains as upright as possible at all times. If you hold the Wine Preserver at an angle it will not remove the air from the bottle properly.



4. Hold the Wine Preserver firmly and press it down against the Stopper. When the Pump Activation Ring is pressed against the Stopper, the pumping action begins pumping air out of the bottle.
5. The pumping action stops automatically after 20 seconds and a tone sounds. Do not release the pressure on the wine stopper until the wine preserver stops.

**NOTE:** If the bottle is more than half empty, repeat the process a second time.

6. Lift the Wine Preserver up and off of the bottle. You may feel some resistance and hear a small popping sound. This is normal.
7. Return the Wine Preserver to the Charging Base.
8. Twist the silver ring on the Stopper so the white arrow points to the day of the month on which the bottle was sealed. This allows you to keep track of how long it has been since the bottle was opened. To preserve maximum qualities of

your wine, it is best to use the remaining wine within 3 to 5 days of opening.

To open a bottle sealed with the Wine Preserver:

1. Press the pin at the center of the Stopper to the side. If the bottle was properly sealed, you will hear air entering the bottle as the seal is broken.
2. Firmly hold the wine bottle in one hand and remove the Stopper with the other hand.
3. Rinse the Stopper and store in a clean, safe place or on the Charging Base.

## CARE AND MAINTENANCE

- Clean exterior surface by wiping with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Do not submerge in water or other liquids.
- Do not attempt to clean any inside surfaces.
- To ensure that the product is fully charged and available for use, always return to the charging base after use.
- When not in use, store on the charging base in a clean, dry location.
- Do not place heavy items on top of appliance during storage.
- Store the charging adaptor in a clean, dry location.

## SPECIFICATIONS

Battery Type.....	Ni-MH, rechargeable
Adapter Input.....	100-240V AC 50/60Hz, 5W
Adapter Output.....	9V DC, 80mA
Charging Time .....	Approx. 15 hours

## NOTES

## ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

**Obtaining Service:** To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or

suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

**BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.



Find thousands more  
great ideas online

**Brookstone®**

324898

© Brookstone 2017

Brookstone.com • 1-800-846-3000  
1 Innovation Way, Merrimack, NH 03054