

Getting Started (5)

▶ Charging Voice Caddie

** Using the USB cable provided, plug your Voice Caddie into a USB port on your computer or into any USB power adapter.
Please charge your Voice Caddie before first use until it is fully charged. The LED light below the VC logo will be red while charging and green when fully charged.



▶ VC Manager

** The Voice Caddie 300 is preloaded with over 30,000 courses worldwide and comes ready to use.
Download additional courses using the VC manager.
1) Go to www.voicecaddie.com and select your region.
2) Log in to your account. If you are a new user, register for a new account.
3) Navigate to the Downloads page and install the latest version of the VC Manager.
System requirements are available on the webpage.
4) Run the VC Manager. Once installed, the VC Manager will automatically update.

▶ Multilingual support

** Voice Caddie 300 supports 8 languages (English, Spanish, French, German, Italian, Korean, Japanese, Chinese).
Language selection is available through the VC Manager.

*Download VC manager

** Log into the website (www.voicecaddie.com) and move to your regional site and then start the VC manager. (Log in => Download => Start VC manager)

Additional Features

▶ Manual Hole Selection

** If your VC300 locates the incorrect hole, you can manually select the hole at which you wish to play.

1) Press and hold the + and - buttons simultaneously for 2 seconds.

⚡ "Changing holes"



2) Press + to increase the hole number.
Press - to decrease the hole number.

⚡ "Hole number 00"

3) Press the touchpad once when you have located the correct hole.
⚡ "Hole has been changed. Hole number 00"

▶ Touch Lock / Unlock

** While powered on, press the power button once to lock or unlock the touchpad.

Notes

- 1) Allow approximately 2 minutes for Voice Caddie to locate the golf course.
- 2) Voice Caddie does not account for external conditions including, but not limited to, weather, wind, and fairway elevation.
- 3) Battery life is approximately eight hours under normal conditions. In areas with poor reception, battery life may be reduced.
- 4) For better GPS reception, clip Voice Caddie to your cap.

** For further information, please visit our website www.voicecaddie.com

Warranty

One Year Limited Warranty

Voice Caddie warrants this hardware product against defects in materials and workmanship for a period of one year from the date of original retail purchase. If a defect exists, at its option Voice Caddie will (1) repair the product at no charge, (2) exchange the product with a product that is new or like-new and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. Voice Caddie shall have no obligation to repair, replace or refund until the customer returns the defective product to Voice Caddie.
This warranty does not apply: (1) to damage caused by accident, abuse, misuse, misapplication, or non-Voice Caddie products; (2) to damage caused by service performed by anyone who is not an Voice Caddie Authorized Service Provider; or (3) to a product or a part that has been modified without the written permission of Voice Caddie.

Please include:

- 1) Your name, address, and telephone number
- 2) An explanation of the defect
- 3) Proof of the original purchase (receipt) containing a description of the product(s) and purchase date

IN U.S.A. Send To:
Voice Caddie USA
Attn.: Repairs
7035 Orangethorpe Ave, Suite I
Buena Park, CA 90621
Tel.: 714-690-3978

voice caddie
UCommTechnology Co., Ltd.

©2013 Voice Caddie
Register your product within 30 days of purchase at www.voicecaddie.com

Voice Caddie
The World's First Voice-Guided Golf GPS



GOOD DESIGN

voice caddie 300

The Voice Caddie User Manual



voice caddie

VC300 and Accessories

▶ Components



Getting Started

▶ Buttons



▶ Power ON / OFF

** Press and hold the power button for 2 seconds.



▶ Selecting Left / Right Green

** Press and hold the + button for 2 seconds.
⚡ "Right green" / "Left green"

▶ Selecting Yard / Meter

** Press and hold the - button for 2 seconds.
⚡ "Yard" / "Meter"

Getting Started (2)

▶ Distance to the Center of the Green



* Click below the VC logo once

▶ Distance to the Front of the Green



Getting Started (3)

▶ Distance to the Back of the Green



▶ Distance guide to the front & back of the green



* Click below the VC logo twice

** All calculated distances are the straight-line distances from the player's position to the target point on the green.

Getting Started (4)

▶ Shot Distance Measurement

** Press and hold the touchpad before the first shot to set the starting position.
⚡ "Measuring the shot distance."
Press and hold the touchpad at the location of the ball to measure the distance from the starting position.



▶ Guidance Near the Green

** 15 yards / meters from the green, Voice Caddie will discontinue distance guidance.

