



**Brookstone®**

---

i-Renew™

HEATED EYE MASSAGER


## TABLE OF CONTENTS

Warnings and Cautions .....	1
Lithium Polymer Battery Warning .....	4
FCC Information .....	5
Location of Parts and Controls .....	6
Recharging the Battery .....	8
Operation.....	8
Controlling the Music.....	9
Downloading Music.....	10
Troubleshooting .....	10
Care and Maintenance.....	11
Specifications.....	11
Warranty.....	12


## SAVE THESE INSTRUCTIONS

### IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed. Read all instructions before using this massager.

 **DANGER** – To reduce the risk of electric shock:

1. Always unplug this massager from the USB port immediately after charging.
2. Do not use wet hands to connect or disconnect the USB cable.
3. Do not reach for an appliance that has fallen into water.
4. Do not use while bathing or in a shower.
5. Do not place or store the massager where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

 **WARNING** – To reduce the risk of burns, fire, electric shock or injury to persons:

1. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons.
2. Close supervision is necessary when this massager is used by, on or near children, invalids or disabled persons.
3. Use this massager only for its intended use as described in this manual. Do not use attachments not recommended by Brookstone.
4. Never operate this massager if it has a damaged USB cable, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact Brookstone Customer Service at 800-292-9819.

5. Do not move or carry this massager by the USB cable or use the USB cable as a handle.
6. Keep the USB cable away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors.
9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or disabled persons may be dangerous.
11. Never use pins or other metallic fasteners with this massager.
12. Carefully examine the covering before each use. Discard the massager if there are any signs of deterioration, such as blistering, peeling, or cracking.
13. Keep dry - do not wet. Do not operate in a wet or moist condition. Do not use the massager when your body is wet. Do not operate this massager with wet hands.
14. This massager is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this massager by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with this massager.
16. Any individual who may be pregnant, or recently gave birth, has a heart condition, or a pacemaker, suffers from diabetes or other sensory impairment, phlebitis and/or thrombosis, joint dysfunction, inflammation or injuries, weak bones, osteoporosis, a high fever, an abnormal or curved spine, is at an increased risk of developing blood clots, has pins/screws/artificial joints or other medical devices implanted in his/her body, is being treated for a medical

condition or physical injury or is under a doctor's care should consult with a medical professional before using this massager.

17. This product is not intended for self-treatment of conditions that should be managed by a qualified healthcare provider.
18. Consult your physician before using this massager.
19. This massager is designed as a non-professional massager. It is not intended to be a substitute for medical attention. If your ailments and symptoms persist or worsen after use, contact your physician immediately.
20. Do not use this massager if you are not feeling well.
21. Stop operation immediately if you experience any discomfort.
22. Do not fall asleep during the massage session.
23. Do not operate after taking pain killers, sedatives or alcohol.
24. Do not use this massager in combination with other therapeutic equipment or electric blanket, etc., as this may result in ineffectiveness or injury.
25. Do not stand on this massager. Use only while seated.
26. Do not disassemble any part of the massager. Touching the internal components may result in malfunction or electric shock.
27. The massager must only be professionally serviced or repaired. Do not attempt to disassemble or repair the massager yourself.
28. Do not operate for more than 20 continuous minutes. Turn off the massager and allow it to rest (cool) for 40 minutes before re-using. This will prolong the life of the massager.
29. Never use the massager on open skin eruptions, swollen or inflamed areas.

## LITHIUM POLYMER BATTERY WARNING

This device contains a Lithium Polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

Use only the supplied cable to recharge the battery. Improper charging may damage the battery and the device.

Do not attempt to open the rechargeable battery or battery pack. There are no serviceable parts inside.

Keep the battery out of reach of children. If swallowed, consult a physician immediately.

Do not dispose of battery in a fire as it may explode. The battery may also explode if damaged.



## FCC INFORMATION

**Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

## LOCATION OF PARTS AND CONTROLS


### MESSAGE UNIT

1. Main Housing
2. Strap Adjuster
3. Elastic Strap
4. Control Panel
5. Fabric Cover
6. Micro USB Port
7. Speaker
8. USB Cable

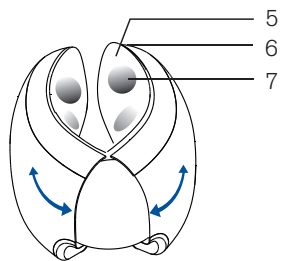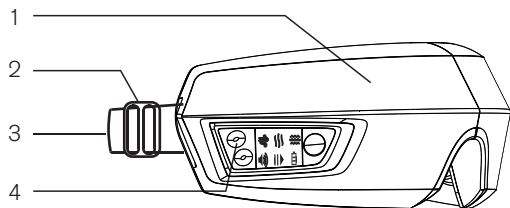

### CONTROLLER

1. Power Button
2. Vibration Indicator
3. Heat Indicator
4. Air Compression Indicator
5. Music Control Button
6. Music Volume Button
7. Music Indicator
8. Music Pause Indicator
9. Charging Indicator

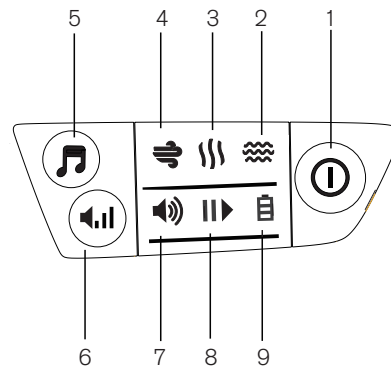

## RECHARGING THE BATTERY

The massager includes a pre-charged Lithium Polymer battery. Over time, and with use, the battery will become depleted.

To recharge the battery:

1. Open the Micro USB Port compartment cover.
2. Plug the Micro USB end of the USB cable into the port.
3. Plug the USB connector into a USB port in an active device or adapter, or plug the USB connector into the AC Adapter and plug into an electrical outlet. The Charging Indicator light flashes blue while charging.
4. When fully charged, the Charging Indicator light turns solid blue. Remove the cable and close the Micro USB Port compartment cover.

## OPERATION

1. Loosen the strap adjuster and adjust the elastic strap to comfortably fit your head.
2. Place the massager on your head, with the fabric cover over your eyes.
3. To turn on the massager, press and hold the Power Button for more than 1 second. (If the massager does not power on, check that the battery is charged. Refer to RECHARGING THE BATTERY.)
4. By default, the air compression, heat, and music features are enabled.
  - To control the music, see Controlling the Music on Page 7.
  - To enable/disable the air compression, heat, and vibration features, press the Power Button. Each press cycles through the options:

Press once for air compression and heat.

- Press again for air compression and vibration.
- Press again for air compression, heat, and vibration.
- Press again for air compression only.
- Press again for heat only.
- Continued pressing cycles through the options.

5. The massager will automatically shut off after 15 minutes of use. To manually turn off the massager, press and hold the Power Button for 2 seconds.

## CONTROLLING THE MUSIC

The i-Renew™ Heated Eye Massager includes six preloaded tracks of music that you can play during your massage. (You can download your own music to play as described in DOWNLOADING MUSIC on Page 8.)

When you power on the massager, the music feature is automatically enabled.

- To pause the music, press and hold the Music Control Button. The Music Indicator light turns off and the Music Pause Indicator light turns on. Press and hold the Music Control Button again to restart the music.
- To switch to the next song in your playlist, short press the Music Control Button.
- To change the music volume, press the Music Volume Button. Each press steps through the five volume settings.

## DOWNLOADING MUSIC

The i-Renew™ Heated Eye Massager includes 128mb of memory, allowing you to download and play your own music.

To download music:

1. Open the Micro USB Port compartment cover and plug the Micro USB end of the USB cable into the port.
2. Plug the USB connector into a USB port in your computer.
3. Open your folder explorer (e.g., Finder or Windows Explorer). i-Renew will be listed as a Device.
4. Click on i-Renew and open the songs folder. The six default songs are listed.
5. Download your songs into the folder. Optionally, you can delete the default songs listed in the folder.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE / ACTION
The massager does not work.	Ensure that the battery is fully charged. When pressing the Power Button to turn on the massager, be sure to hold it down for more than 1 second.
There is a noise during operation.	The mechanical structure of the massager produces a sound. This is normal.

## CARE AND MAINTENANCE

1. Keep the massager clean and away from places of high humidity.
2. Wipe dust and dirt off the massager with a dry, soft cloth after use.
3. Do not put a heavy load on the massager.
4. DO NOT attempt to repair the massager. There are no user-serviceable parts inside.

## SPECIFICATIONS

Dimensions.....	Approx. 8.19 in. x 4/28 in. x 3.2 in. (208mm x 108.6mm x 81.3mm)
Weight.....	0.66 lbs (0.3 kg)
Battery .....	Lithium Polymer
Rated Voltage.....	5V DC
Rated Power .....	5W

## ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) if the product was purchased through Brookstone, provide Brookstone store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

**Obtaining Service:** To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited

Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

**BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.



Find thousands more  
great ideas online

**Brookstone®**

324192

Rev 1

© Brookstone 2017

Brookstone.com • 1-800-846-3000

1 Innovation Way, Merrimack, New Hampshire 03054