



Brookstone®

Wireless Daisy Earbuds

WITH REMOVEABLE DAISIES

for ages
14+



TABLE OF CONTENTS

Caution	1
FCC Information.....	2
Lithium-Polymer Battery Warning.....	3
Location of Parts and Controls	4
Charging the Battery.....	5
Pairing with Your Device.....	6
Operation	8
Removing the Daisies.....	9
LED Indicator.....	10
Care and Maintenance.....	11
Specifications	11
Warranty.....	12

CAUTION

- Use of earbuds diminishes your ability to hear background noise. For your safety and the safety of others, do not use while driving, cycling, or in any situation where reduced ability to hear your surroundings may be hazardous.
- These earbuds fit snugly in your ears. Long-time use may cause discomfort. If you experience discomfort, remove the earbuds.
- Pushing the earbuds too far into your ears, or removing them with a fast motion, may cause discomfort. Remove your earbuds slowly.
- Listening to audio at a high volume may affect your hearing.
- Do not drop, crush, bend or apply excessive force to the device.
- Do not expose the device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storage in damp, humid or wet locations.
- Do not place near heat sources, such as stoves and radiators.
- If you use certain medical devices, such as a pacemaker or cochlear implant, consult with a medical professional before use.
- The unit can only be opened by qualified personnel.

FCC INFORMATION

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: To comply with FCC's RF radiation exposure limits for general population/uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2AJEO-X9B

LITHIUM-POLYMER BATTERY WARNING

This device contains a rechargeable Lithium-Polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

Use only the supplied cable to recharge the battery. Improper charging may damage the battery and the device.


Do not attempt to open the rechargeable battery or battery pack. There are no serviceable parts inside.

Keep the battery out of reach of children. If swallowed, consult a physician immediately.

Do not dispose of battery in a fire as it may explode. The battery may also explode if damaged. (BC)

LOCATION OF PARTS AND CONTROLS

1. Removeable Daisies
2. LED Indicator
3. Multi-function Button
4. Microphone
5. Daisy Light Switch
6. Micro USB Port
7. Left/Right Identifier
8. Earbuds

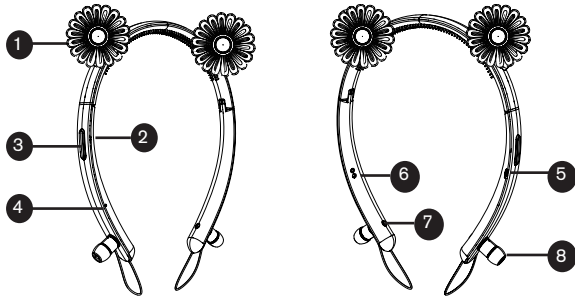

CHARGING THE BATTERY

Your Daisy Earbuds include a rechargeable battery.

To charge your Daisy Earbuds:

1. Plug the Micro USB end of the USB connector into the Micro USB port on the Daisy Earbuds.
2. Plug the USB end of the USB connector into a USB port on a laptop or USB power adapter.
3. The LED Indicator turns red during charging. It turns blue when the earbuds are fully charged.

Charge the battery before first use. A full charge takes approximately 1.5 hours.

When the battery is low, the LED Indicator flashes blue and red and the daisy light will flash.

If the device is not used for an extended period of time, the battery may require recharging.

PAIRING WITH YOUR DEVICE

1. Prepare your device (e.g., smartphone) to pair using Bluetooth®, making sure that the device is within 3 feet of the earbuds. Refer to your device's owner's manual for information on using the Bluetooth® function.
2. Press and hold the earbud's Multi-Function Button (MFB) for about 3 seconds, until the LED Indicator alternates between red and blue.
3. On your device, search the list of available devices and select Flower Headband. Note that it may take a few seconds for the earbuds to be listed as an available device. Depending on your device, you may have to tap SCAN to update the device list. Consult your device's owner's manual.
4. If prompted, enter the PIN 0000.

A message will display on your device confirming that your device is now paired/connected and the LED Indicator will slowly flash blue, indicating that the device is paired.

The devices will remain paired, even after being turned off, until you cancel the pairing. Consult your device's owner's manual for information on cancelling pairing.

If the pairing is not successful within 5 minutes, the Daisy Earbuds will power off. Ensure that both devices are charged, that the earbuds are in pairing mode and are within 3 feet of your device, and that there are not objects, such as a wall, blocking the connection.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Brookstone is under license.

OPERATION

After pairing with your device, you can listen to music or answer phone calls using your Daisy Earbuds whenever you are connected to your device through Bluetooth®.

Power on and enjoy your music and phone calls, as described in the following table. Use your device to control the volume, change tracks, and other operations.

Function	Operation
Power on	Press and hold MFB for 4 second. The LED Indicator flashes blue three times. Through the earbuds you will hear "Power ON. Connected."
Power off	Press and hold MFB for 8 seconds. The LED Indicator flashes red three times. Through the earbuds you will hear "Power OFF."
Turn on/off daisy lights	Locate the Daisy Light Switch, located on the right side of the band. Slide the switch up to turn on the lights. Slide the switch down to turn off the lights.
MUSIC OPTIONS	
Play	Press MFB.
Pause	Press MFB while listening to music. The LED Indicator flashes blue once.

Function	Operation
PHONE OPTIONS	
Answer a call	When there is an incoming call, press MFB once.
End a call	While on a call, press MFB once.
Refuse call	When there is an incoming call, double-click MFB.

REMOVING THE DAISIES

The daisies on your Daisy Earbuds are removable.

To remove and replace the daisies:

1. Twist each daisy to rotate it 90° and lift it out of the slot.
2. To replace the daisies, place them into the slot and twist 90° to lock into place.

LED INDICATOR

The color displayed by the LED Indicator reflects the current operation and status.

Blue	Flash three times	Power on
	Flash slowly	Connected
	Solid	Fully charged
	Flashes once	Pause
Red	Flash three times	Power off
	Solid	Charging in progress
Red and Blue	Alternating	In pairing mode
	Flashes blue 10 times, then red three times	Low battery

CARE AND MAINTENANCE

Clean the earbuds with a soft cloth or damp chamois leather.
Never use solvents.

SPECIFICATIONS

Bluetooth Version Support.....v4.0
Bluetooth Profiles.....A2DP (V1.2), AVRCP (V1.4), HFP(V1.6), HSP(V1.2)
Battery.....90mAh
Driver.....Dia. 8 mm
Input Power.....DC 5V, 100mA-2A max
Standby Time.....Up to 150 Hours
Music Time.....Up to 4.2 hrs, without light; up to 2.5 hrs with light
Talking Time.....Up to 7 hours
Charging Time.....Approx. 1.5 hours
Distance.....Approx. 33 feet (10 meters), open area
Temperature Range.....Approx. 14° F - 122° F (-10° C - 50° C)

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) if the product was purchased through Brookstone, provide Brookstone store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any

non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Find thousands more
great ideas online

Brookstone®

322350

Rev 1

©Brookstone 2018

Merrimack, New Hampshire USA 03054 • 800-846-3000 • Brookstone.com