



Fold

LITHIUM-ION BATTERY WARNINGS

This device contains a non-removable lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Fold

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCCID: ZRH-20151216

 
Fold

LOCATION OF PARTS AND CONTROLS

1. Headphones
2. Transmitter
3. Power On/Off switch
4. BASS/NORMAL Switch (RF mode)
5. Volume Up Button
6. SCAN Button
7. Volume Down Button
8. Power/RF Reception LED
9. AUX-IN Port
10. Charging Contacts
11. Charging Contacts/Pins
12. CHARGE LED
13. POWER LED
14. DC-In Port
15. Audio-In Port
16. SCAN Button
17. Power ON/OFF Switch
18. AC/DC Adapter
19. Audio Cable
20. 3.5mm(female)-to-RCA(male) Y-Cable


Fold

LOCATION OF PARTS AND CONTROLS (HEADPHONES)

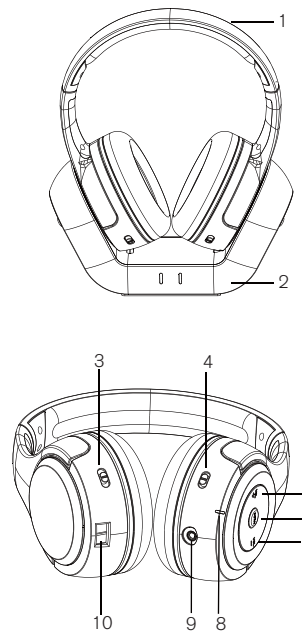


Fold

 LOCATION OF PARTS AND CONTROLS (TRANSMITTER)

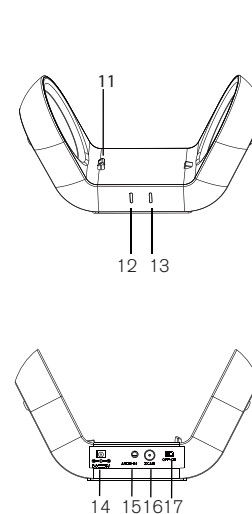

 LOCATION OF PARTS AND CONTROLS (ACCESSORIES)

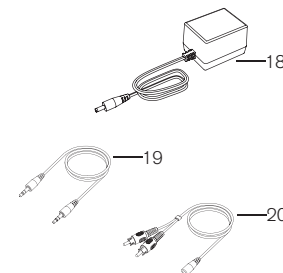

Fold

CHARGING THE HEADPHONES

1. For first time use, charge the headphones for 12 hours.
2. To charge the headphones, ensure the headphones are OFF by sliding the Power Switch to OFF on headphones until the Power LED is OFF. Place the headphones on the top of transmitter ensuring the charging contacts are aligned. The transmitter's CHARGE LED will blink BLUE to show the headphones are charging. When the headphones are fully charged, the CHARGE LED is solid BLUE.

TRANSMITTER SET UP

1. Plug the AC/DC power adapter into the DC Port located on the rear of the transmitter. Plug the other end of the AC/DC power adapter into an electrical wall outlet.
2. Slide the Power Switch to ON . The transmitter's Power LED is solid RED.
3. Connect the transmitter to an audio source using the included RCA and audio cables.

Note:

If CHARGE LED disappears, please check if the charging contacts of both the headphones and transmitter are well aligned.

USING THE HEADPHONES WITH TRANSMITTER

1. To turn the headphones on, slide the Power Switch to ON. The Power/RF LED is in solid RED.
2. The headphones will automatically sync to the transmitter. When the headphones are attempting to set up a connection with the transmitter, the Power/RF LED will blink RED. When the headphones and transmitter are synced, the headphones' LED is solid BLUE.
3. Use the Volume buttons on the headphones and the audio source to change the volume.
4. Slide the BASS/NORMAL Switch to BASS for bass boost function under RF wireless mode.
Note: It has no bass boost function under wired connection.
5. After 5 minutes of no audio signal detected, the Power/RF LED turns solid RED.
6. To turn the headphones off, slide the Power Switch to OFF. The Power/RF LED will light off.

Fold

USING THE HEADPHONES WITH WIRED CONNECTION

1. Connect the headphones directly to an audio source by plugging one end of a 3.5mm-to -3.5mm cable (included) into the AUX-IN Port at the bottom of the headphones and other end into the audio source.
2. Use the volume controls on the audio source to change the volume.

Fold

TROUBLE SHOOTING NO SOUND

- Ensure the AC/DC adapter is securely plugged into the transmitter.
- Ensure the headphones are powered on.
- Ensure the headphones and the transmitter are synced.
- The headphones may need to be charged.
- The headphones may need to move closer to the transmitter.
- Ensure the audio device is switched ON.
- The volume of the audio device may need to be increased.
- If there is interference or poor signal reception, audio from the headphones will mute and the Power/RF LED is solid RED. Press the SCAN Buttons on transmitter and on headphones at same time for 10 seconds until the headphones' LED turn SOLID BLUE again.

CARE AND STORAGE

1. Dust the headphones and transmitter with a soft, dry cloth.
2. Store the headphones and transmitter in a cool, dry place.

SPECIFICATIONS

Power Supply (Transmitter):

DC 5V, 300mA

Power Supply (Headphones):

3.7V 900mAh

Frequency: 2.4-2.48 GHz Digital

Transmission mode: GFSK

Range: Up to 100ft (approx. 30m)

S/N Radio: 75dB

Frequency Response: 30Hz~20KHZ

Charging Time: Approx. 4 hours (subsequent uses after first initial charge of 12 hours)

Battery Life: Approx. 12 hours

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at **1-800-292-9819**. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own

warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.