



Brookstone®

Chef's Fork Pro

KNOW WHEN YOUR FOOD IS COOKED TO PERFECTION

TABLE OF CONTENTS

Warnings and Cautions.....	1
FCC Information.....	4
Location of Parts and Controls.....	6
Installing the Batteries.....	8
Temperature Probe Release.....	8
Using the Chef's Fork.....	9
Using the LED Light.....	10
Viewing the Temperature in Fahrenheit or Celsius.....	10
Care and Maintenance.....	11
Specifications.....	11
Warranty.....	12

IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

SAFETY AND HANDLING INFORMATION

For maximum product life, do not drop, throw, or crush the Chef's Fork. Do not expose it to humidity, dust, or operating temperatures outside 32°F to 113°F (0°C to 45°C).

SAVE THESE INSTRUCTIONS

WARNING

1. Close supervision is necessary when this unit is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.

BATTERY PRECAUTIONS

1. Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
2. Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
3. The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
4. Use only fresh batteries of the required size and type.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: To comply with FCC's RF radiation exposure limits for general population/uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.


LOCATION OF PARTS AND CONTROLS

1. Well Done Doneness LED Indicator
2. Medium Well Doneness LED Indicator
3. Medium Doneness LED Indicator
4. Medium Rare Doneness LED Indicator
5. Rare Doneness LED Indicator
6. Temperature Scale (°F/°C)
7. Temperature
8. Entree Selection
9. Low Battery Indicator
10. Power/Select Button

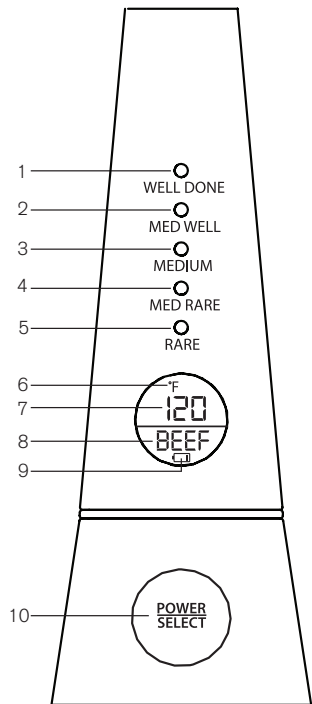

LOCATION OF PARTS AND CONTROLS

11. Temperature Probe Cover
12. Temperature Probe
13. Temperature Probe Release Button
14. LED Light Button
15. Hanger
16. °F/°C Pinhole

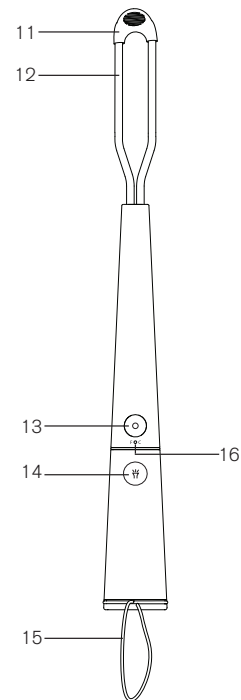

INSTALLING THE BATTERIES

1. Twist the BATTERY COVER counter clock-wise until the ▲ icon aligns with the 🔒 icon to unlock and remove.
2. Insert 4 AAA batteries (not included) according to polarity indicators.
3. Replace the BATTERY COVER and twist clockwise until the ▲ icon aligns with the 🔒 icon and lock in place.
4. The LOW BATTERY INDICATOR will appear on the LCD DISPLAY when the batteries need to be replaced.

TEMPERATURE PROBE RELEASE

1. Press the TEMPERATURE PROBE RELEASE BUTTON to release and remove the TEMPERATURE PROBE.
2. Insert the TEMPERATURE PROBE and press down until the probes are firmly locked into position to replace.

USING THE CHEF'S FORK

1. Remove the TEMPERATURE PROBE COVER from the TEMPERATURE PROBE.
2. Press and hold the POWER/SELECT BUTTON to turn the Chef's Fork on.
3. Press POWER/SELECT BUTTON repeatedly until your desired entrée appears on the LCD DISPLAY: Beef, Hamburger (HMBR), Chicken (CHCK), Pork, Turkey (TRKY), Fish, Veal, Lamb or Baked Potato (BPOT).
4. Insert the TEMPERATURE PROBE into the center of the thickest portion of your entrée.
5. Hold the Chef's Fork in position for 6-10 seconds for an accurate measurement.
6. The color-changing LCD DISPLAY shows your entree's progress:
Green: Just Started
Blue: Rare
Pink: Medium Rare
Purple: Medium
Yellow: Medium Well
Red: Well Done/Done
Flashing Red: Over-Cooked.
7. The DONENESS LED INDICATORS show the doneness level of your entree.
8. Press and hold the POWER/SELECT BUTTON to turn the Chef's Fork off.

Notes:

- Ensure the TEMPERATURE PROBE is inserted at least 1/2" deep into the meat to give a more accurate temperature readout. Avoid touching

bone or heavy fat areas. Do not leave TEMPERATURE PROBE inserted when the entrée is cooking.

- When powered on, the LCD DISPLAY defaults to the last used entrée.
- The LCD DISPLAY turns off automatically after one minute of inactivity.

USING THE LED LIGHT

9. Press the LED LIGHT BUTTON to turn the LED LIGHT on.
10. Press the LED LIGHT BUTTON to turn the LED LIGHT off.

Note:

The LED LIGHT turns off automatically after one minute of inactivity.

VIEWING THE TEMPERATURE IN FAHRENHEIT OR CELSIUS

1. Insert a thin pointed object into the °F/°C PINHOLE to view the temperature in Celsius.
2. Insert a thin pointed object into the °F/°C PINHOLE again to view the temperature in Fahrenheit.

CARE AND MAINTENANCE

- TEMPERATURE PROBE is dishwasher-safe. Remove TEMPERATURE PROBE from handle before washing. See page 8 for release instructions.
- Wipe the handle with a damp cloth. Do not submerge in water.
- If the TEMPERATURE PROBE becomes damaged during use, order a replacement probe (991592) by calling customer service at 800-846-3000.

SPECIFICATIONS

Power Supply.....4 AAA batteries
Dimensions Approximately 17" h x 1.9" w

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or

suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Find thousands more
great ideas online

Brookstone®

991592

Merrimack, New Hampshire, USA 03054 • 800-846-3000 • Brookstone.com