

Find thousands more
great ideas online

Brookstone

907978

Merrimack, New Hampshire USA 03054 • 800-846-3000 • Brookstone.com

Brookstone

Pocket Projector Slim

CONTENTS

Caution	2
Warning!	5
FCC Information	6
Location of Parts and Controls	8
Compatibility	10
Apple Devices	10
Android Devices	11
Windows 8 Devices	12
Blackberry Devices	13
Other Devices	14
Specifications	16
Charging the Battery	17
Operating the Projector	17
Setup	17
Powering Up and Viewing Media	18
Image Adjustments	19
Troubleshooting	20

1

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

SAVE THESE INSTRUCTIONS!

2

6. Do not allow adapter cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by cord or use cord as handle.
11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the socket by pulling the power cord.

4

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Close supervision is necessary when this appliance/product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the adapter cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.

3

WARNING!

THIS PRODUCT CONTAINS A RECHARGEABLE BATTERY


- Do not store this product in high temperatures, damp areas, or in direct sunlight.
- Never disassemble the product.
- Never dispose of the product in fire or water, which may result in explosion and/or injury.
- Keep product out of reach of children.
- Do not touch product with damp hands.
- Dispose of the product properly.
- The product must not be discarded with ordinary household waste.
- Contact your local recycling center for proper disposal.

5

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

LOCATION OF PARTS AND CONTROLS

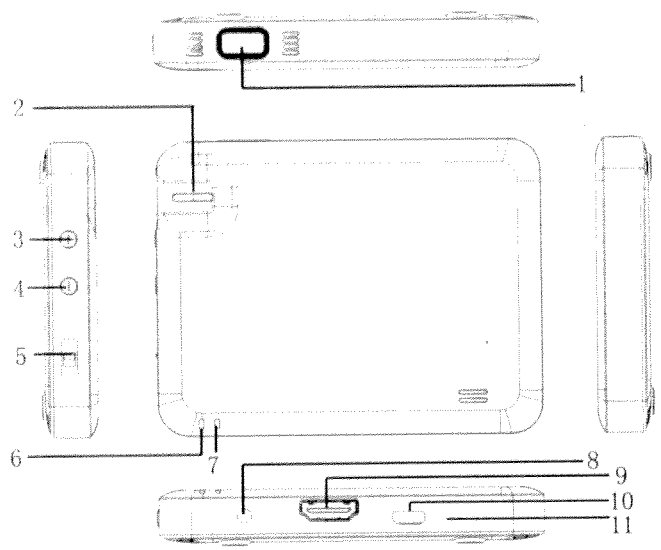

1. Lens
2. Focus wheel
3. Volume up control
4. Volume down control
5. Power switch
6. System indicator light
7. Power indicator light
8. 3.5mm Audio out
9. HDMI/MHL input
10. Micro USB power port
11. Reset button

8

9

COMPATIBILITY

APPLE DEVICES

DEVICE	MIRRORING*	CABLES REQUIRED
iPhone® 6 Plus iPhone 6 iPhone 5 iPod touch® 4 th Gen iPad® Mini 1 st Gen iPad 4 th Gen	x	◆ Lightning™ Digital AV Adapter + ◇ HDMI to HDMI Cable
iPhone 4s iPad 3 rd Gen iPad 2 nd Gen	x	◆ 30-Pin Digital AV Adapter + ◇ HDMI to HDMI Cable
iPhone 4 iPod touch 3 rd Gen iPod touch 2 nd Gen iPad 1 st Gen		◆ 30-Pin Digital AV Adapter + ◇ HDMI to HDMI Cable
Apple TV	x	◇ HDMI to HDMI Cable
◇ Included in the box / ◆ Purchase separately		

ANDROID DEVICES

DEVICE	MIRRORING*	CABLES REQUIRED
HTC® One®	x	◇ MHL Micro USB to HDMI Cable
Samsung Galaxy Note® II Samsung Galaxy S® III Samsung Galaxy S®4 Samsung Galaxy S®5	x	◇ 5-to-11 pin Micro USB Adapter + ◇ MHL Micro USB to HDMI Cable
Google Chromecast	x	None required - plugs directly into the HDMI port on the projector. The Chromecast also requires power. The Chromecast can be plugged into the wall or can be plugged into the USB charging only port on the projector.
◇ Included in the box / ◆ Purchase separately		

WINDOWS 8 DEVICES



DEVICE	MIRRORING*	CABLES REQUIRED
Surface™	x	◆ HD Digital AV Adapter (Z2S-00001-72219) + ◇ HDMI to HDMI Cable
Samsung® ASUS VivoTab™ RT Sony Vaio T Acer Aspire S7 Lenovo Twist Toshiba U845W Acer Aspire v5	x	◆ Micro HDMI to HDMI Adapter + ◇ HDMI to HDMI Cable
◇ Included in the box / ◆ Purchase separately		

BLACKBERRY DEVICES

DEVICE	MIRRORING*	CABLES REQUIRED
Blackberry® Z10	x	◆ Micro HDMI to HDMI Adapter + ◇ HDMI to HDMI Cable
◇ Included in the box / ◆ Purchase separately		

11

OTHER DEVICES

DEVICE	MIRRORING*	CABLES REQUIRED
Roku® Amazon Fire TV	x	 ◇ HDMI to HDMI Cable
Roku Streaming Stick	x	None required - Stick plugs directly into the HDMI port on the projector.
Laptop with HDMI port	x	 ◇ HDMI to HDMI Cable
Laptop with Micro HDMI port	x	◆ Micro HDMI to HDMI Adapter + ◇ HDMI to HDMI Cable
Laptop with Mini HDMI port	x	◆ Mini HDMI to HDMI Adapter + ◇ HDMI to HDMI Cable

14

SPECIFICATIONS

Product Dimensions	4" x 3" x 0.5"
Brightness	15 Lumens*
Lamp Life	LED lamp with up to 20,000 hours
Image Size	Up to 60"
Distance	2ft to 10ft
Throw Ratio	2.2
Contrast Ratio	1100:1*
Native Resolution	640 x 360
Aspect Ratio	16:9
Built-in Speaker	1 0.8-watt speakers
Battery	Li-polymer, 2,100 mAh
Battery Life	Approximately 2 hours while projecting

16



2. Connect the included HDMI cable to the HDMI port on the projector and the other end to your device.
- NOTE:** Some devices may require an adapter to connect to your device.
3. If desired, connect a speaker to the 3.5mm audio out jack. If no external speaker is connected, the projector's 1 internal 0.8-watt speaker will be used for audio.

POWERING UP AND VIEWING MEDIA

1. Power on the projector by flipping the power switch to the on position.
2. Allow the projector 15 to 20 seconds to fully start up and sync with your device.

NOTE: After syncing with the projector you may see your device's screen being mirrored by the projector. Some devices may not have this ability, but they can still be used with the projector to project videos, photo slide shows, and some app content (this functionality is app dependent).

3. Choose the media you would like to view from the menu on your device and play as you normally would.

DEVICE	MIRRORING*	CABLES REQUIRED
Gaming Console with HDMI port	x	 ◇ HDMI to HDMI Cable
Camera or camcorder with Micro USB port	x	 ◇ MHL Micro USB to HDMI Cable
Camera or camcorder with Micro HDMI port	x	◆ Micro HDMI to HDMI Adapter + ◇ HDMI to HDMI Cable
Camera or camcorder with Mini HDMI port	x	◆ Mini HDMI to HDMI Adapter + ◇ HDMI to HDMI Cable

◇ Included in the box / ◆ Purchase separately

*Mirroring refers to the ability to project the on screen content with the projector. Devices that do not support mirroring can still project with applications that support video out (e.g. Netflix, Hulu, YouTube, etc).

15

CHARGING THE BATTERY

1. The built-in battery is charged using the included Micro USB to USB cable. The blue system indicator light will come on if the battery power is getting low.

IMPORTANT: Fully charge the battery before the first use (approximately 3-4 hours).

OPERATING THE PROJECTOR

SETUP

1. The projector can be powered using the included Micro USB to USB cable or the built-in battery.
 - To power the projector with the Micro USB to USB cable, connect the Micro USB to the projector's and plug the other end into a USB port. Once connected, the power indicator light will illuminate red on the projector to show it is connected to power.
 - To power the projector with the built-in battery, simply turn the projector on.

IMPORTANT: Fully charge the battery before first use (approximately 3-4 hours).

17

IMAGE ADJUSTMENTS

ADJUSTING THE IMAGE SIZE

To adjust the size of the projected image, simply move the projector farther away from (for a larger image) or move the projector closer (for a smaller image) to the projection surface.

ADJUSTING THE FOCUS

Simply roll the focus wheel control forwards and backwards to fine-tune the projected image.

ADJUSTING THE VOLUME

Touch the mode control area to activate the volume controls. Use the volume up and volume down control areas to adjust to the preferred volume level.

TROUBLESHOOTING

- Q. The projected image is blurry.
- A. Adjust the focus wheel on the projector to fine-tune the picture. Also check that the surface you are projecting on is smooth.
- Q. The projector is not projecting.
- A. Here are several things to check if your projector is not projecting:
- If on battery power, try plugging the projector in with the Micro USB cable.
 - If plugged in with the Micro USB cable, check that the Micro USB cable is securely plugged into both the USB power source and the Micro USB port on the projector.
 - Check that you are using any necessary adapters with your device. If an adapter is required, power down the projector, add the adapter, and then turn the projector back on.

20

LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The

22

NOTE: If your device does not have the ability to mirror with the projector, you must launch an app with video out support, play a slide show on your device, or play a video on your device to see a projected image.

21

Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

23