

Countertop Wine Opener

 
EFFORTLESS CORK REMOVAL EVERY TIME



⚠ CAUTION


- This product contains sharp parts. Handle carefully. Use caution when using and cleaning.
- Not for use by children.

LOCATION OF PARTS

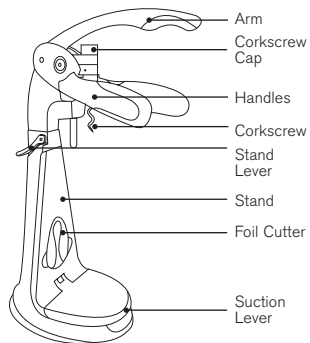

ASSEMBLING THE WINE OPENER

 1. Raise the Stand Lever halfway and insert the top section of the opener into the Stand, with the Handles over the base.

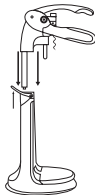

NOTE: The top section can be inserted fully or part way to accommodate different size bottles.

2. Lower the Stand Lever, securing the top section into the Stand.

PREPARING THE OPENER FOR USE

 
1. Place the opener on a flat, clean surface.
2. Raise the Suction Lever.
3. Hold the opener by the Stand and press down firmly while lowering the Suction Lever.



USING THE FOIL CUTTER

1. Remove the Foil Cutter from the Stand. Caution: The Foil Cutter contains sharp cutting wheels. Use caution when handling.

2. Place the Foil Cutter over the top of the bottle. Ensure that the two cutting wheels make contact with the foil.

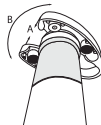

3. Squeeze the Foil Cutter gently (A) and fully twist around the bottle (B), ensuring that the foil is completely scored.

4. Lift the Foil Cutter off the bottle and remove the foil to expose the cork. Place the Foil Cutter back in the Stand.

 
NOTE:

- Do not force the Foil Cutter open.
- Do not try to fit the Foil Cutter around the neck of the bottle.
- If a wax cover protects the cork, remove the wax with a knife. This will prevent build-up of wax on the corkscrew.

OPENING YOUR BOTTLE OF WINE

1. Remove the foil using the Foil Cutter, as described previously.

2. Fully extend the Arm to raise the Corkscrew.

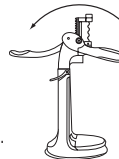

3. Place your wine bottle on the Stand. Squeeze the two Handles to securely hold the top of the bottle neck. The Corkscrew should be positioned over the cork.

4. Pull the Arm up and over the bottle. The Corkscrew will enter the cork. *Be sure to pull the Arm all the way down, to fully insert the Corkscrew into the cork.*



5. Tightly squeeze the Handles with one hand and lift the Arm to remove the cork from the bottle.

6. Hold the bottle, release the Handles, and remove the wine bottle from the Stand.



Find thousands more great ideas online

Brookstone®

324365

© Brookstone 2017

RELEASING THE CORK

1. Spread the Handles slightly while bringing the Arm up and over the Stand.

 


2. Squeeze the Handles together tightly and lift the Arm up and back over the Stand to release the cork from the Corkscrew.



NOTE: If the cork does not release or stops between the Handles, repeat this procedure.

REPLACING THE CORKSCREW

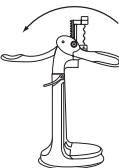1. Raise the Arm up and over the Stand.
- 
2. Unscrew the Corkscrew Cap.
3. Turn the Corkscrew counterclockwise. The Corkscrew will rise out of the mechanism.
4. Remove the Corkscrew.
5. Insert the new Corkscrew, aligning it carefully in the mechanism. Turn the Corkscrew clockwise if necessary to insert completely.
6. Replace the Corkscrew Cap and turn clockwise to tighten securely.

CARE AND MAINTENANCE

- Clean with a damp cloth. Do not submerge in water.

SPECIFICATIONS

Dimensions.....Approx. 8 x 5 x 17 in.
(Approx. 20 x 13 x 43 cm)
Weight.....Approx. 4.24 lb
(Approx. 2 kg)

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone

that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.